

**TECHNICAL DATA** 

Vacuum Pump | Vacuum Pump - Vacuum pumps and interconnect are required to control below atmospheric pressure, and to evacuate the bell jar.





## **Ordering information**



## **Vacuum Pump**

Vacuum Pump - Vacuum pumps and interconnect are required to control below atmospheric pressure, and to evacuate the bell jar.

<sup>2</sup> Fluke Corporation Vacuum Pump | Vacuum Pump - Vacuum pumps and interconnect are required to control below atmospheric pressure, and to evacuate the bell jar.



## Fluke. Keeping your world up and running.®

Fluke Corporation

PO Box 9090, Everett, WA 98206 U.S.A.

Fluke Australia

Unit 26, 7 Anella Ave Castle Hill, NSW 2154 Australia Phone: 61 2 8850-3333 www.fluke.com.au ©2025 Fluke Corporation. All rights reserved.

Specifications subject to change without notice.

04/2025

Modification of this document is not permitted without written permission from Fluke Corporation.

<sup>3</sup> Fluke Corporation Vacuum Pump | Vacuum Pump - Vacuum pumps and interconnect are required to control below atmospheric pressure, and to evacuate the bell jar.