

## TECHNICAL DATA

# Fluke TRM50 Coaxial Feed-through BNC Male to BNC Female Cable Terminator



## Key features

- 50 ohm coaxial feedthrough
- Provides proper cable termination
- Prevents coaxial cable reflections

## Product overview: Fluke TRM50 Coaxial Feed-through BNC Male to BNC Female Cable Terminator

Fluke TRM50 Coaxial Feed-through Terminators come standard with Fluke 190-502-III and 190-504-III ScopeMeter Portable Oscilloscopes and are compatible with other [Fluke ScopeMeter 190 Series III](#) or Series II Test Tools. TRM50 Cable Terminators help ensure proper termination of coaxial signal cables such as the [Fluke PM9091 50 Ohm Coaxial Set](#), and [Fluke PM9092 50 Ohm Coaxial Cable Set](#), when used with high frequency signals and signals with a fast (short) risetime. The TRM50 also helps to prevent signal reflections on the coaxial cable that might distort signal fidelity.

## Specifications: Fluke TRM50 Coaxial Feed-through BNC Male to

## BNC Female Cable Terminator

Specifications	
Connector type	BNC-male to BNC-female
Impedance	50 Ohm
Impedance accuracy	± 1%
Frequency range	up to 500 MHz
Voltage ratio	1:1 (output/input)
Voltage Standing Wave Ratio (VSWR)	< 1:1.15 at 500 MHz
Max signal voltage	7 Vrms
Max Voltage over ground	1000 V CAT III
Max power	1 W
Overall length	53 mm (2.1 in.)

## Ordering information



### **Fluke TRM50 Coaxial Cable Terminator**

Fluke TRM50 Coaxial Cable Terminator

---

Includes:

- Two TRM50 Coaxial Cable Terminators
-

**Fluke.** *Keeping your world up and running.®*

**Fluke (UK) Ltd.**  
52 Hurricane Way  
Norwich, Norfolk  
NR6 6JB  
United Kingdom  
Tel.: +44 (0)20 7942 0708  
E-mail: [cs.uk@fluke.com](mailto:cs.uk@fluke.com)  
[www.fluke.com](http://www.fluke.com)

©2025 Fluke Corporation. All rights reserved.  
Data subject to alteration without notice.  
04/2025

**Modification of this document is not permitted  
without written permission from Fluke  
Corporation.**