

TECHNICAL DATA

A40B-ADAPT/LC | LC Male to LC Male adapter



Product overview: A40B-ADAPT/LC | LC Male to LC Male adapter

This adapter permits connecting current sources with LC female current connectors to A40B LC female shunt input connectors (the 50 A and 100 A shunts). This can also be used with the A40B ADAPT/LCN if a female mating connector is required.

Ordering information



A40B-ADAPT/LC

LC Male to LC Male adapter



Fluke. *Keeping your world up and running.®*

Fluke Corporation
PO Box 9090, Everett, WA 98206 U.S.A.

For more information call:
In the U.S.A. (800) 443-5853
In Canada (800) 36-FLUKE
From other countries +1 (425) 446-5500
www.fluke.com

©2025 Fluke Corporation.
Specifications subject to change without notice.
04/2025

**Modification of this document is not permitted
without written permission from Fluke
Corporation.**