

Data teknis

Fluke TPS Clamp 200 A/20 A Clip-on Current Transformer



Spesifikasi: Fluke TPS Clamp 200 A/20 A Clip-on Current Transformer

General Specifications	
Measuring Range selectable per software	0.2 A to 20 A 2 A to 200 A
Peak current for sinusoidal currents	74 A 300 A
Intrinsic error	0.5%
Frequency Range	40 Hz to 10 kHz
Operating Voltage	300 V CAT IV
Phase Error	0.5°
Jaw Opening	< 15 mm diameter or 15 x 17 mm bus bars
Errors in % of measuring range at 23 °C ± 2 K; 74 °F ± 2 K, for 48 to 65 Hz Phase angle error at nominal current Imax maximum current without time limit (for AC and DC shunts)	

Model



Fluke TPS CLAMP 200A/20A

200 A / 20 A Clip-on Current Transformer

Fluke. *Memastikan aktivitas Anda terus berjalan dan beroperasi.*

Fluke Corporation

PO Box 9090, Everett, WA 98206 U.S.A.

For more information call:

In the U.S.A. (800) 443-5853

In Europe/M-East/Africa

+31 (0)40 267 5100

In Canada (800)-36-FLUKE

From other countries +1 (425) 446-5500

www.fluke.com

BUT. FLUKE SOUTH EAST ASIA PTE LTD

Menera Satu Sentra Kelapa Gading #06-05

Jl. Bulevar Kelapa Gading Kav. LA# No. 1

Summarecon Kelapa Gading

Jakarta Utara 14240

Indonesia

Tel: +62 21 2938 5922

Email: info.asean@fluke.com

www.fluke.com/id

©2025 Fluke Corporation. Specifications subject to change without notice.

04/2025

Modification of this document is not permitted without written permission from Fluke Corporation.