


**TECHNICAL DATA** 


# Fluke 376 FC True-RMS Clamp Meter plus insulated hand tools starter kit





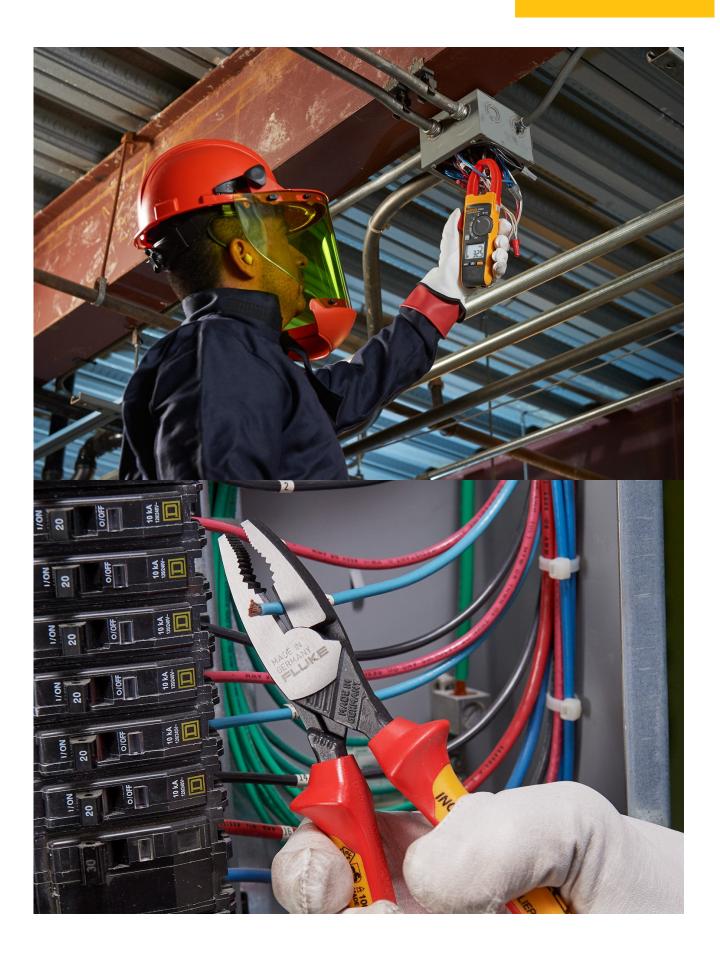



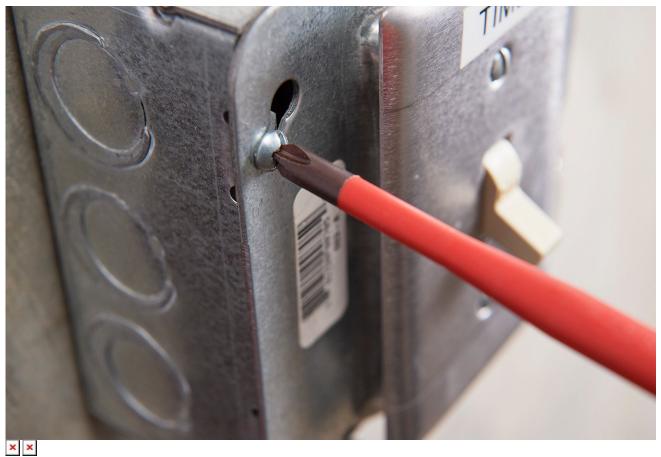



### **Key features**

- 376 FC: Measure AC/DC current with included iFlex current probe
- 376 FC: VFD low pass filter for non-linear signals measurements
- Insulated tools: certified to 1000 V AC, 1500 V DC
- Insulated tools: ergonomic 8-piece set

# Product overview: Fluke 376 FC True-RMS Clamp Meter plus insulated hand tools starter kit

The Fluke 376 FC True-RMS Clamp Meter combined with the insulated hand tools starter kit, the most often used screwdrivers, pliers and cutters.

#### 376 FC Clamp Meter

- 1000 A ac and dc current measurement, 2500 A ac current measurement with iFlex flexible current probe
- 1000 V ac and dc voltage measurement
- True-rms voltage and current for accurate measurements on non-linear signals
- Log and trend measurements to pinpoint intermittent faults
- Transmit results wirelessly via Fluke Connect® Measurements app
- Create and send reports right from the field
- 3 Fluke Corporation Fluke 376 FC True-RMS Clamp Meter plus insulated hand tools starter kit



• Stay safely away from the arc flash zone through Bluetooth connectivity to Apple and Android devices

#### Slotted screwdrivers

Three different bladeforms
Three handle lengths
Phillips screwdrivers, #1 and #2 tips
Two handle lengths

#### Long nose pliers with side cutter and gripping zones

Unique milled wave pattern gripping zones
4 gripping points for pulling round objects with superior grip that won't slip
Straight, half-round, long and slim knurled jaws, specially profiled
Side cutting edge for wire cutting

#### Heavy duty, high leverage diagonal cutter

Cuts hard materials including steel and piano wire Power joint and precision cutting edges

#### **Heavy Duty Combination Pliers**

Secure hold by aggressive serrated jaws and 4-point gripping hole Slim shape for better access to wires in tight spaces Powerful gripping jaw, yet 20% lighter weight than other designs ext, bullets if it makes sense

## Specifications: Fluke 376 FC True-RMS Clamp Meter plus insulated hand tools starter kit

General Specifications		
AC Current via Jaw		
Range	999.9 A	
Resolution	0.1 A	
Accuracy	2% ±5 digits (10 Hz to 100 Hz)	
	2.5% ±5 digits (100-500 Hz)	
Crest Factor (50 Hz/60 Hz)	3 @ 500 A	
	2.5 @ 600 A	
	Add 2% for C.F. >2	
AC Current via Flexible Current Probe		
Range	2500 A	
Resolution	0.1 A (D 600 A)	
	1 A (□ 2500 A)	
Accuracy	3% ±5 digits (5 – 500 Hz)	



	3.0 at 1100 A	3.0 at 1100 A		
Crest Factor (50/60Hz)	2.5 at 1400 A	2.5 at 1400 A		
	1.42 at 2500 A	1.42 at 2500 A		
	Add 2% for C.F. > 2			
Position Sensitivity				
×				
	i2500-10 Flex	i2500-18 Flex		
A				
Distance from Optimum	0.5 in (12.7 mm)	1.4 in (35.6 mm)		
Error	±0.5 %	±0.5 %		
В				
Distance from Optimum	0.8 in (20.3 mm)	2.0 in (50.8 mm)		
Error	±1.0 %	±1.0 %		
С				
Distance from Optimum	1.4 in (35.6 mm)	2.5 in (63.5 mm)		
Error	±2.0 %	±2.0 %		
Measurement uncertainty assun field, and within operating temp		timum position, no exteal electrical or magneti		
DC Current				
Range	999.9 A			
Resolution	0.1 A	0.1 A		
Accuracy	2% ±5 digits	2% ±5 digits		
AC Voltage				
Range	1000 V			
Resolution	0.1 V (□600.0 V)	0.1 V (E600.0 V)		
Resolution	1 V (□1000 V)	1 V (□1000 V)		
Accuracy	1.5% ±5 digits (20 Hz to 50)	1.5% ±5 digits (20 Hz to 500 Hz)		
DC Voltage				
Range	1000 V	1000 V		
Resolution	0.1 V (□600.0 V)	0.1 V (□600.0 V)		
Resolution	1 V (01000 V)	1 V (□1000 V)		
Accuracy	1% ±5 digits	1% ±5 digits		
mV dc				
Range	500.0 mV			
Resolution	0.1 mV	0.1 mV		
Accuracy	1% +5 digits	1% ±5 digits		

<sup>5</sup> Fluke Corporation Fluke 376 FC True-RMS Clamp Meter plus insulated hand tools starter kit



Frequency via Jaw		
Range	5.0 Hz to 500.0 Hz	
Resolution	0.1 Hz	
Accuracy	0.5% ±5 digits	
	5 Hz to 10 Hz, □10 A	
Trigger level	10 Hz to 100 Hz, □5 A	
	100 Hz to 500 Hz, □10 A	
Frequency via Flexible Current Pro	obe	
Range	5.0 Hz to 500.0 Hz	
Resolution	0.1 Hz	
Accuracy	0.5% ±5 digits	
	5 Hz to 20 Hz, □25 A	
Trigger level	20 Hz to 100 Hz, □20 A	
	100 Hz to 500 Hz, 🗆 25 A	
Resistance		
Range	60 kΩ	
	0.1 Ω (Π600 Ω)	
Resolution	1 Ω (Π6000 Ω)	
	10 Ω (□60 kΩ)	
Accuracy	1% ±5 digits	
Capacitance		
Range	1000 μF	
Resolution	0.1 μF (Δ 100 μF)	
Nesolution	1 μ F (🛘 1000 μF)	
Accuracy	1% ±4 digits	
Mechanical Specifications		
Maximum voltage between any terminal and earth ground	1000 V	
Baeries	2 AA, NEDA 15A, IEC LR6	
Operating temperature	-10 °C to +50 °C	
Storage temperature	-40 °C to +60 °C	
	□90% RH (at 10 °C to 30 °C)	
Operating humidity - non-condensing (< 10°C)	П75% RH (at 30 °C to 40 °C)	
J ( )	П45% RH (at 40 °C to 50 °C)	
Operating altitude	2000 m	
Storage altitude	12,000 m	



Size (L x W x H)	249 x 85 x 45 mm		
Weight	395 g		
Jaw opening	34 mm		
Flexible current probe diameter	7.5 mm		
Flexible current probe cable length (head to electronics connector)	1.8 m		
	IEC 61010-1, Pollution Degree 2		
	IEC 61010-2-032: CAT III 1000 V / CAT	IV 600 V	
Safety	IEC 61010-2-033:CAT III 1000 V / CAT	IV 600 V	
	IP rating	IEC 60529: IP30, non-operating	
Radio Frequency Certification FCC ID	T68-FBLE IC:6627A-FBLE		
Electromagnetic Compatibility (EMC	)		
	IEC 61326-1: Portable, Electromagnetic Environment, IEC 61326-2-2		
	CISPR 11: Group 1, Class A		
Inteational	Group 1: Equipment has intentionally generated and/or uses conductively-coupled radio frequency energy that is necessary for the inteal function of the equipment itself.		
	Class A: Equipment is suitable for use in all establishments other than domestic and those directly connected to a low-voltage power supply network that supplies buildings used for domestic purpose. There may be potential difficulties in ensuring electromagnetic compatibility in other environments due to conducted and radiated disturbances. Emissions that exceed the levels required by CISPR 11 can occur when the equipment is connected to a test object.		
	Class A Equipment (Industrial Broadcasting & Communication Equipment)		
Korea (KCC)	Class A: Equipment meets requirements for industrial electromagnetic wave equipment and the seller or user should take notice of it. This equipment is intended for use in business environments and not to be used in homes.		
USA (FCC)	47 CFR 15 subpart B. This product is considered an exempt device per clause 15.103.		
Temperature coefficients	Add 0.1 x specified accuracy for each degree C above 28 °C or below 18 °C		

#### 87V Industrial Multimeter Specifications:

Voltage DC	Maximum voltage	1000 V
	Accuracy	±(0.05% + 1)
	Maximum resolution	10 μV
Voltage AC	Maximum voltage	1000 V
	Accuracy	±(0.7% + 2) True RMS
	AC bandwidth	20 kHz with low pass filter; 3 db @ 1 kHz
	Maximum resolution	0.1 mV

<sup>7</sup> Fluke Corporation Fluke 376 FC True-RMS Clamp Meter plus insulated hand tools starter kit



Current DC	Maximum amps	10 A (20 A for 30 seconds maximum)		
	Amps accuracy	±(0.2% + 2)		
	Maximum resolution	0.01 μΑ		
Current AC	Maximum amps	10 A (20 A for 30 seconds maximum)		
	Amps accuracy	±(1.0% + 2) True RMS		
	Maximum resolution	0.1 μΑ		
	Maximum resistance	50 ΜΩ		
Resistance	Accuracy	±(0.2% + 1)		
	Maximum resolution	0.1 Ω		
	Maximum capacitance	9,999 µF		
Capacitance	Accuracy	±(1% + 2)		
	Maximum resolution	0.01 nF		
	Maximum frequency	200 kHz		
Frequency	Accuracy	±(0.005% + 1)		
	Maximum resolution	0.01 Hz		
	Maximum duty cycle	99.9%		
Duty cycle	Accuracy	$\pm (0.2\% \text{ per khz} + 0.1\%)$		
	Maximum resolution	0.1%		
Temperature	−200.0 °C − 1090 °C			
80 BK	-40.0 °C - 260 °C			
	Maximum conductance	60.00 nS		
Conductance	Accuracy	±(1.0% + 10)		
	Maximum resolution	0.01 nS		
	Range	3 V		
Diode	Resolution	1 mV		
	Accuracy	±(2% + 1)		
Duty cycle range	Accuracy	Within ±(0.2% per kHz + 0.1%)		
Environmental Spec	ifications	'		
Operating	-20 °C to + 55 °C			
Storage	-40 °C to + 60 °C			
Humidity	0% - 90% (0 °C - 35 °C)	0% – 90% (0 °C – 35 °C)		
Operating	2000 m			
Safety Specifications	5			
Overvoltage	EN 61010-1 to 1000 V CAT III, 6	500V CAT IV		
Agency	UL, CSA, TÜV, VDE listed			

<sup>8</sup> Fluke Corporation Fluke 376 FC True-RMS Clamp Meter plus insulated hand tools starter kit



Mechanical and Gene	ral Specifications				
Size	201 x 98 x 52 mm (with holster)				
Weight	355 g				
	Digital 6000 counts updates 4/sec.		es 4/sec.		
Display	Analog		32 segments, update	32 segments, updates 40/sec	
	Frequency	Frequency		ates 3/sec at > 10 Hz	
Warranty	Lifetime	Lifetime			
Baery Life	Alkaline	Alkaline ~400 hours typical, without backlight		without backlight	
Shock	1 Meter drop per IEC 61010–1:2001				
Vibration	Per MIL-PRF-28800 for a Class 2 instrument				
Screwdriver Type	Blade length (inches <i>mm</i> )	Handle length (inches <i>mm</i> )	Handle width (inches <i>mm</i> )	Bladeform diameter (inches <i>mm</i> )	
Slot	3 <i>75</i>	3-3/8 <i>86</i>	1 25	3/32 2.55	
Slot	4 100	3-11/16 <i>94</i>	1 5/16 <i>30</i>	5/32 4.0	
Slot	5 125	4-3/16 <i>106</i>	1 7/16 <i>36</i>	1/4 6.0	
Phillips #1	3 <i>80</i>	3-11/16 <i>94</i>	1 3/16 <i>30</i>	7/32 5	
× Phillips #2	4	4-3/16 <i>106</i>	1 7/16 <i>36</i>	1/4	

Pliers Type	Nominal Length (inches)	Nominal Length (mm)
Long Nose	8	200
Diagonal Cuers	8	200
Lineman Combination Pliers	8	200

#### Warranty

#### Fluke Insulated Hand Tool Lifetime Limited Warranty

Each Fluke Insulated Hand Tool will be free from defects in material and workmanship for its lifetime. As used herein, "lifetime" is defined as seven years after Fluke discontinues manufacturing the product, but the warranty period shall be at least fifteen years from the date of purchase. This warranty does not cover damage from neglect, misuse, contamination, alteration, accident or abnormal conditions of operation or handling, damage or normal wear and tear of mechanical components. This warranty covers the original purchaser only and is not transferable.

Recommendations for use and in-service care of Fluke Insulated Hand Tools

The following is guidance conceing the maintenance, inspection, retest and use of Fluke Insulated Hand Tools.

#### Waing - to avoid electrical shock or personal injury:



- Keep fingers behind the finger guards of the tool. Never touch conductive parts.
- Always wear approved eye protection.
- Do not use in wet or damp locations. Do not use unless the tool is clean and dry.
- Do not apply excessive force or stress to the tool insulation that may cause damage. Examples include using the insulated surfaces as a fulcrum to pry or wedge or gripping insulated tool handles with other tools such as pliers or wrenches to increase torque or leverage.

If the tool is used in a manner not specified, the protection may be impaired.

#### Storage

Insulated hand tools should be properly stored to minimize the risk of damage to the insulation due to storage or transportation. These insulated hand tools should be stored separated from other tools to avoid mechanical damage or confusion with uninsulated tools. Furthermore, these insulated hand tools should be prevented from contact with excessively hot surfaces (for example steam pipes) or exposure to excessive UV- radiation.

#### Inspection before use

Before use, each Insulated Hand Tool should be visually inspected by the user. If there is any doubt conceing the safety of the insulated hand tool, it should be subjected to examination by a competent person and if necessary retested to determine suitability or disposed of to prevent further use.

#### **Temperature**

Insulated Hand Tools should be used only in environments having temperatures between -20 °C and +70 °C and, for tools marked "C", between -40 °C and +70 °C.

#### Periodic examination and electrical retesting

An annual visual examination by a suitably trained person is recommended to determine the suitability of the Insulated Hand Tool for further service. If an electrical retest is required by national regulation or in the case of doubt after visual examination, the applicable dielectric test of IEC 60900 for insulated hand tools should be performed.

For details contact a Fluke Service Center.



### **Ordering information**



#### **IB376K**

Fluke 376 FC True-RMS Clamp Meter + Insulated Hand Tools Starter Kit (5 insulated screwdrivers and 3 insulated pliers)

#### Includes:

- Fluke 376 FC True-rms AC/DC Clamp Meter with iFlex®
- 18-inch iFlex® Flexible Current Probe
- TPAK magnetic hanging strap
- TL75 test leads
- ISLS3 Insulated Slotted Screwdriver 3/32, 3"
- ISLS5 Insulated Slotted Screwdriver 5/32, 4"
- ISLS8 Insulated Slotted Screwdriver 1/4, 5"
- IPHS1 Insulated Phillips Screwdriver #1, 3"
- IPHS2 Insulated Phillips Screwdriver #2, 4"
- INLP8 Insulated Long Nose /w Side Cutter and Gripping Zones
- INDC8 Insulated Heavy Duty High Leverage Diagonal Cutter
- INCP8 Insulated Heavy Duty Linesman Combination Plier
- RUP8 Roll up pouch

#### **IB376M**

Fluke 376 FC True-RMS Clamp Meter + 5 insulated screwdrivers

#### Includes:

11 Fluke Corporation Fluke 376 FC True-RMS Clamp Meter plus insulated hand tools starter kit



- Fluke 376 FC True-rms AC/DC Clamp Meter with iFlex®
- 18-inch iFlex® Flexible Current Probe
- TPAK magnetic hanging strap
- TL75 test leads
- ISLS3 Insulated Slotted Screwdriver 3/32, 3"
- ISLS5 Insulated Slotted Screwdriver 5/32, 4"
- ISLS8 Insulated Slotted Screwdriver 1/4, 5"
- IPHS1 Insulated Phillips Screwdriver #1, 3"
- IPHS2 Insulated Phillips Screwdriver #2, 4"

#### **IB376L**

Fluke 376 FC True-RMS Clamp Mete + 3 insulated screwdrivers

#### Includes:

- Fluke 376 FC True-rms AC/DC Clamp Meter with iFlex®
- 18-inch iFlex® Flexible Current Probe
- TPAK magnetic hanging strap
- TL75 test leads
- ISLS3 Insulated Slotted Screwdriver 3/32, 3"
- ISLS5 Insulated Slotted Screwdriver 5/32, 4"
- IPHS2 Insulated Phillips Screwdriver #2, 4"

Optional accessories	Description
Fluke TPAK ToolPak™ Magnetic Meter Hanger	Powerful magnetic strap for safe, hands free measurements.
Fluke TLK289 - Industrial Master Test Lead Set	Fluke test leads, alligator clips and test probes broaden the ability to take meter measurements in different environments. Buy Online Now.
Fluke AC220 SureGrip™ Alligator Clips	SureGrip™ accessories are designed to improve steadiness in slippery hands.
Fluke Pack30 Professional Tool Backpack	The Fluke Pack30 tool backpack gives you a comfortable hands-free experience vs. traditional tool belts that put all the weight on your lower back.





#### Preventive maintenance simplified. Rework eliminated.

Save time and improve the reliability of your maintenance data by wirelessly syncing measurements using the Fluke Connect $^{\text{\tiny{TM}}}$  system.

- Eliminate data-entry errors by saving measurements directly from the tool and associating them with the work order, report or asset record.
- Maximize uptime and make confident maintenance decisions with data you can trust and trace.
- Access baseline, historical and current measurements by asset.
- Move away from clipboards, notebooks and multiple spreadsheets with a wireless one-step measurement transfer.
- Share your measurement data using ShareLive™ video calls and emails.

Find out more at **flukeconnect.com** 







All trademarks are the property of their respective owners. WiFi or cellular service required to share data. Smartphone, wireless service and data plan not included with purchase. First 5 GB of storage is free. Phone support details can be viewed at **fluke.com/phones**.

Smart phone wireless service and data plan not included with purchase. Fluke Connect is not available in all countries.